

HW/SW-Requirements for Windows

created: 22.08.2001/hk
changed: 07.11.2001/hg
changed: 06.12.2002/hm
changed: 22.03.2005/hm

Release 2006

Required System Software:

OS Version **Windows NT 4.0 SP5 / Windows 2000 / Windows XP**

Window Manager Hummingbird eXceed 6.2 X-Server

Graphics Hummingbird eXceed 6.2 X-Server (other versions by request)

Recommended System Hardware:

	<i>EUKLID Design</i>	<i>NesCAD</i>
Intel PC	min. Pentium III 650 Mhz recommended \geq 1 Ghz	
System Disc	min. 2 GB (NTFS), recommended 4 GB	
Data Disc	min. 2 GB, recommended \geq 4 GB	
Swap Space	min. 600 MB (ca. 1.5-2 * Memory)	min. 180 MB
Graphics OpenGL		
Mouse	Windows NT / Windows 2000 / Windows XP compatible (HCL 4.0), 3 buttons	
Network	Windows NT / Windows 2000 / Windows XP network card (HCL 4.0) <i>This network card should not be onboard, otherwise you need a node swap when changing computer hardware.</i>	
CD-ROM-Drive	Windows NT / Windows 2000 / Windows XP compatible (HCL 4.0) for installation	

Product Requirements:

<i>Product</i>	<i>Version</i>	<i>Disc Space</i>	<i>Memory min.</i>	<i>--> 3 recom.</i>	<i>Special Info</i>
Nescad	2006	40 MB	64 MB	128 MB	1 + 2
EUKLID Design	2006	200 MB	256 MB	512 MB	2
EUKLID Solidjoin	2006	200 MB	512 MB	768 MB	2

Special Info:

1. Required minimum monitor resolution : 1280 x 1024
2. only INTEL Pentium III and Pentium IV Processor supported (no Alpha, no Power PC, etc.)
3. For a single product only (see also Special Info 5)
4. CAD/CAM compl. means a combination of our products (more than one is running at one time): min. 256 MB Memory with 600 MB Swap space
5. additional 100 MB disk space for online documentation on disk.